

5 TROUBLESHOOTING

Check AVR with below steps when you face failure problem:

- Is the power switch of AVR turned on?
- Is AVR plugged into a working wall outlet?
- Is line voltage within the rating specified?
- Is circuit breaker on the AVR active?
- Is AVR overloaded?

Use the table below to solve the AVR operation problems. If the problems cannot be resolved, please provide model name, serial number, date of purchase, date of the problem occurred and full description of the problem including load status, AVR LED status, installation environment...etc. when call for service.

Problem	Probable Cause	Solution
AVR shut down after a few seconds and resettable circuit breaker is tripped	AVR is overloaded	Remove some loads and reset the circuit breaker of power switch
AVR fail to turn on and LED is not ON	Utility power exceeds voltage rating or AVR is overheated.	Make sure the voltage matches the AVR capacity specified in the label. If AVR is overheated, wait until the AVR cools down before using it again within the rated load.

6 SPECIFICATION

INPUT	
Voltage	110/115/120Vac or 208/220/230Vac (Label specified)
Voltage Range	-18%, +16%
Frequency	50/60Hz auto sensing
OUTPUT	
Capacity	Label specified
Voltage	110/115/120Vac or 208/220/230Vac (Label specified)
Voltage Range	-10%, +10%
Frequency	50Hz or 60Hz
Steps of Regulation	1 boost + 1 buck
Outlet	4pcs for AVR & Surge protected
PROTECTION	
Overload	Manual Reset Circuit Switch
Over-temperature	Thermal Switch
Over-voltage Cut-off	Yes
Low-voltage Cut-off	Yes
Surge Suppression	300 Joules
Delay Timer	Yes
STATUS INDICATOR	
Regulation	Green
ENVIRONMENT	
Operating Temperature	0°C - 40°C (32°F - 104°F)
Noise Level	<40dB at 1M
Relative Humidity	<95% (Non-condensing)


*Product specifications are subject to change without further notice.

701-0071642 AVR-AplusB-I588-01

A+ Plus®

Aplus, Reliable Power Brand Deserve Your Trust

USER'S MANUAL

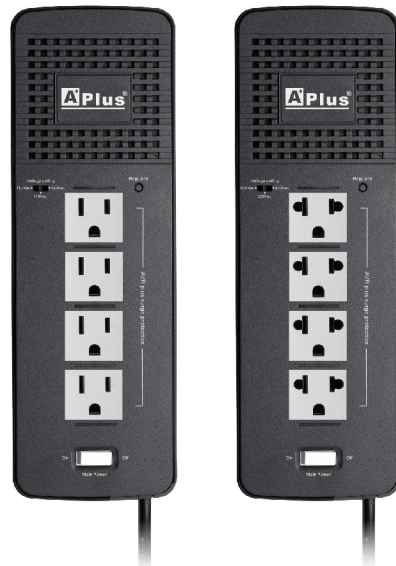

This manual provides safety, installation and operation instructions which will guide you to the best performance of your equipment. Please read and keep this manual.

APLUS® is a trademark of APLUS POWER CORP. and is manufactured under its authority. All designs and contents are subject to changes without prior notice. © Copyright 2021 APLUS® all rights reserved.

1 INTRODUCTION

► System Description

The Product is Automatic Voltage Regulator (AVR) designs to automatically maintain a constant voltage level to protect sensitive electronics from unsafe fluctuations such as power sag, surge, spike or over voltage. The AVR integrated with 2 steps regulation, 4 AVR protected outlets, delay reconnection and LED status indicator in a compact wall-mount slim unit, to protect any sensitive electronics at home or office.


► Features

- Provide stable output voltage through boost and buck stabilizer
- Built-in thermal switch for over-temperature protection
- High/low voltage cut-off and overload protection
- Power switch with resettable circuit breaker
- Adjustable voltage setting by DIP switch
- Surge suppression 300 Joules
- Delay reconnection

2 CAUTION

- Failure to follow the safety instructions may cause serious injury and also equipment damage.
- Be sure to operate within the power rating of the AVR.
- The AVR must be installed in a protected environment that provides adequate airflow around and is free from dust, corrosive fumes and conductive contaminants. **DO NOT** install the AVR near excessive humidity, under sunshine or near heating appliances such as a radiator or heater.
- If AVR is out of order, disconnect the power cord and contact with your dealer right away.
- The AVR should be installed near to wall socket and equipment and be easily accessible.
- **DO NOT** plug the AVR's power cord into AVR's output socket. That will result in a safety hazard.
- **DO NOT** attempt to disassemble the AVR. The AVR contains no user-serviceable parts inside. A qualified technician or electrician in accordance with local electrical code should perform maintenance.
- **DO NOT** connect AVR with loading like washing machines, hair dryers, heaters, multifunction printers or any other large electrical devices with power consumption of equal or above in AVR label specified. The current drawn by those loads can cause the AVR to overload.

3 OVERVIEW

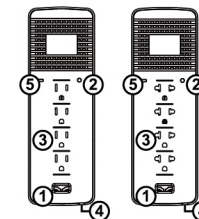


1. Power switch with resettable circuit breaker
2. Regulation LED
3. AVR & surge protection outlets
4. AC input line cord
5. Adjustable voltage DIP switch

4 ADJUSTABLE VOLTAGE INSTRUCTION

Please make sure the setting voltage of AVR unit matches the voltage of your local country.

► LV model


If you are located in 110Vac country, please set the adjustable voltage DIP switch of AVR unit at 110Vac.



If you are located in 115Vac country, please set the adjustable voltage DIP switch of AVR unit at 115Vac.



If you are located in 120Vac country, please set the adjustable voltage DIP switch of AVR unit at 120Vac.



► HV model

If you are located in 208Vac country, please set the adjustable voltage DIP switch of AVR unit at 208Vac.



If you are located in 220Vac country, please set the adjustable voltage DIP switch of AVR unit at 220Vac.



If you are located in 230Vac country, please set the adjustable voltage DIP switch of AVR unit at 230Vac.

